

MANN-FILTER Product information

No. 182 25.08.2023

PU 12 003/1 z: Guidance for (de-)mounting

Disassembly of filter

- 1. Unplug the water sensor
- 2. Turn the drain screw upwards and drain the filter
- 3. Open the housing: MANN-FILTER recommends the use of a specialized tool combined with additional support from a ratchet and extension
- 4. Take out the element: The bayonet lock (type A and C) can be unlocked with manual force (pivot-point: see red arrow on page 2). The snap-fit (type B) can be unlocked with support of a screwdriver

Assembly of the filter

- 1. Change O-ring of the housing
- 2. Element assembly: First align arrows of the element and housing
 - a. Type A: Turn complete element until bayonet is locked
 - b. Type B: Push element firmly downwards until snap-fit is locked
 - c. Type C: Put element in the housing and then turn the white ring until bayonet is locked
- 3. Lube all O-rings of the element and housing
- 4. Assemble housing cup incl. element with the housing cover. Important: Align arrow of housing cup flush with arrow of housing cover (next to open lock symbol)
- 5. Turn housing cup until housing parts lock. Arrow of housing cup is now flush with closed lock symbol.
- 6. Plug-in water sensor and close drain screw by turning it downwards

Complete assembly video is available in our online catalogue: PU 12 003/1 z






MANN-FILTER Product information

No. 182 25.08.2023

PU 12 003/1 z: Guidance for (de-)mounting





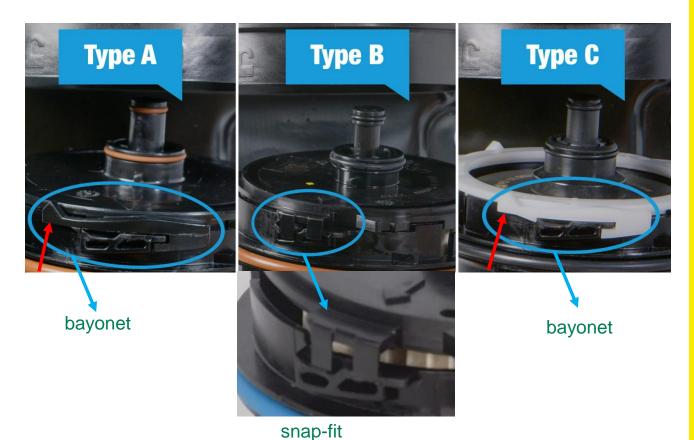



MANN-FILTER Product information

No. 182 25.08.2023

PU 12 003/1 z: Guidance for (de-)mounting

