

# MANN-FILTER

## Product Information

No 119  
28/08/2015


### Installation of oil filter elements with center tube without intubation level

The center tube of the housing cover for the oil filter elements HU 721/4 x and HU 815/2 x do not have any intubation level at the sealing seat. Due to that fact, the sealing surface of the element has to be pushed over an edge. For that, higher effort is required.

The installation of the element is good feasible, if below mentioned steps will be followed:



- 1 Fix the oil filter element oblique at the edge of the center tube.

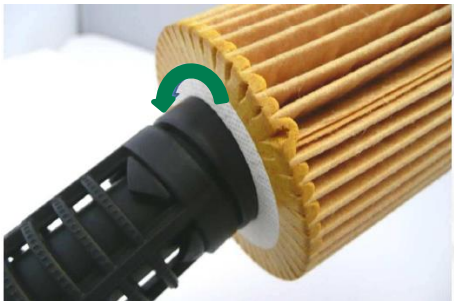

- 2 Rotate the element and slide it on the center tube of the housing cover afterwards.



- 3 Push the element up to the stop in the housing cover finally, so the two sealing surfaces of the element fits correctly to the center tube.

